


PARTIAL INFILTRATION PERMEABLE PAVEMENT SYSTEM: 1 3/16"

MSNSP – Marmiro Stones Natural Stone Pavers – Pedestrian Application

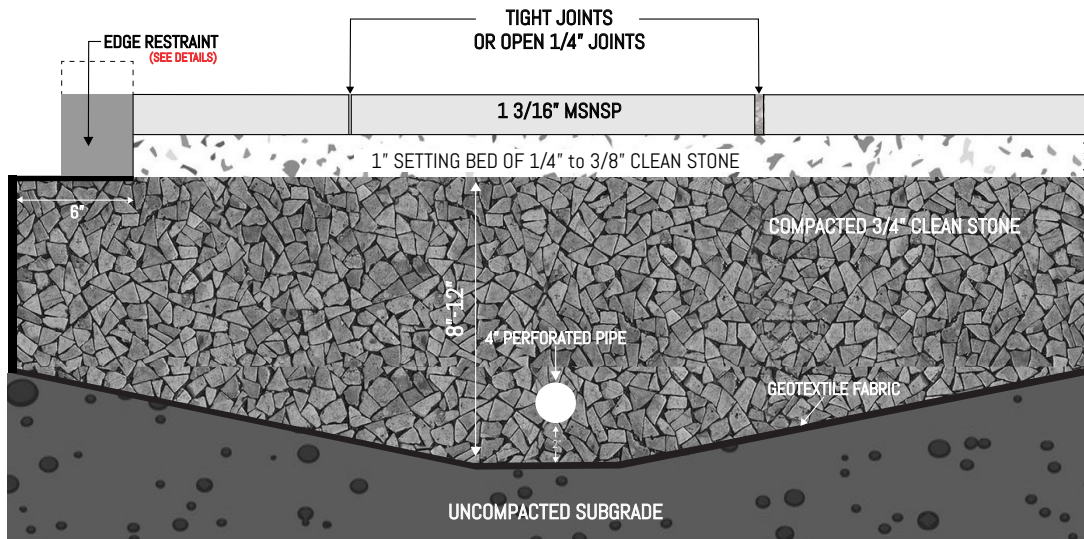

WARNING

- Installation of material is sign of acceptance.
- No returns on open crates, custom orders, & products with custom packaging.
- For unique job conditions, soil types and concrete slab reinforcement additional engineering may be needed.
- Concrete sand or any additives mixed with sand and screenings hold moisture under Marmiro Stones® Natural Stone Pavers (MSNSP) and can affect the integrity of the stone. They are prohibited from being used as a bedding layer.
- Tamping sandblasted marble is not recommended. This will cause chipping along the edges of the stone.



BASE THICKNESS & EXCAVATION DEPTHS PER APPLICATION - RESIDENTIAL

Project Type	Soil Type	
	Sand and/or Gravel	Silts or Clay
Pedestrian	4" - 6"	6" - 8"
Pedestrian Excavation Depths	10.5" - 12.5"	10.5" - 14.5"

*MARMIRO STONES NOTE

Follow local code and the engineer's hydrologic/structural design. Keep all open graded aggregates and joints free of fines at every stage.

SYSTEM OVERVIEW

Intent: Infiltrate first to sub grade; excess drains via a perforated under drain with a raised outlet for detention. Use this method when moderate native infiltration is warranted or where controlled release is required.

1) SITE PROTECTION

- a. Erosion & sediment controls; stockpile stone on fabric/hard pads to prevent fines.

2) EXCAVATION

- a. Please be sure to call 811 or your local utility companies to ensure utility lines are marked correctly before any excavation has begun.
- b. If lines are found, please take proper precautions with the customer to ensure utility lines will not be disturbed. This includes, but is not limited to, septic fields, sprinkler lines and heads.
- c. Excavate soils maintaining a slope of 3/16" per foot to allow for proper drainage. This slope should mimic the slope of your top of pavement.
- d. Excavation should extend equal to the depth of excavation.
 - Example: Base = 6", Base & excavation should extend 6" past edge of pavement.
- e. Depending on your soil type, compaction of your sub grade may be needed while maintaining the slope as mentioned above.

3) GEOTEXTILE & DRAINPIPE

- a. Do not compact sub grade soils. Install woven geotextile, encapsulating the entire excavated area, including the vertical walls of the excavated area using a shingle method overlapping a minimum of 4”.
- b. Install a 4” perforated pipe with holes facing down to capture excess water. Do not set pipe on bottom. Pipe should be exposed to daylight outside in excavated area to relieve water build up. If daylight is not optional, consider using a catch basin with a grate.
- c. Provide clean outs when possible.

4) SUBSTRUCTURE - BASE

- a. Install 8”-12” of ASTM #57 (3/4” clean) stone, compacting in 4” lifts using a vibratory plate compactor.

5) SETTING BED

- a. Final elevation of base should be 2-1/4” below finished grade.
- b. Set your 1” metal screed rails at an acceptable working width.
- c. Place the 1/4”-3/8” clean stone (AASHTO #8, AASHTO #89, AASHTO #9) for setting bed on top of #57 base.
 - Concrete sand is not recommended under MSNSP.
 - Screenings are not recommended under MSNSP.
- d. A good practice would be to place screed rails parallel to a fixed finished grade edge.
- e. Screeding the setting bed: Pull clean stone along the metal screed rails using an aluminum straight edge.
- f. Removing screed rails: Place setting bed material in the voids and use a trowel to level with the setting bed.
- g. Based on the pattern and job site conditions, choose your starting point that is most practical from staging of materials.
- h. During the installation of MSNSP, it is best practice to use string lines or laser equipment to maintain square at the starting point.

6) EDGE RESTRAINT

- a. Options:
 - Curbing
 - Natural stone edging placed in mortar bed.
 - Poured in place concrete curb.

7) FINISHING

- a. Options for joint spacing:
 - Tight joint – No material required for joint fill.
 - Open joint using 1/4” or 3/8” spacers.
 - Sweep ¼” (or smaller) of clean/washed angular stone for joint fill.

8) BEST PRACTICES

- a. A good practice would be to place screed rails parallel to a fixed finished grade edge.
- b. During installation of MSNSP, it is best practice to use string lines or laser equipment to maintain square at the starting point.
- c. Due to variations in natural stone, it is required to pull from multiple crates.
 - French Pattern – Pull from 2-3 crates for proper blending.
 - Single Size – Pull from 4 crates for proper blending.
- d. Antiqued travertine application: Use a vibratory plate compactor with rubber mat or vibratory roller.
- e. Antiqued & Vintage marble application: Use a vibratory plate compactor with rubber mat or vibratory roller.
- f. Sandblasted marble application: Use a white non-marking mallet to set the stones.
- g. Perform all cutting using a diamond blade. Cutting wet can provide a smoother cut and may decrease chipping on MSNSP.